


HOW TO INSTALL CHILLER BLINDS

FOR TOP FIX ONLY - INSTALLATION IS COMPLETE AT STEP 3


STEP ONE

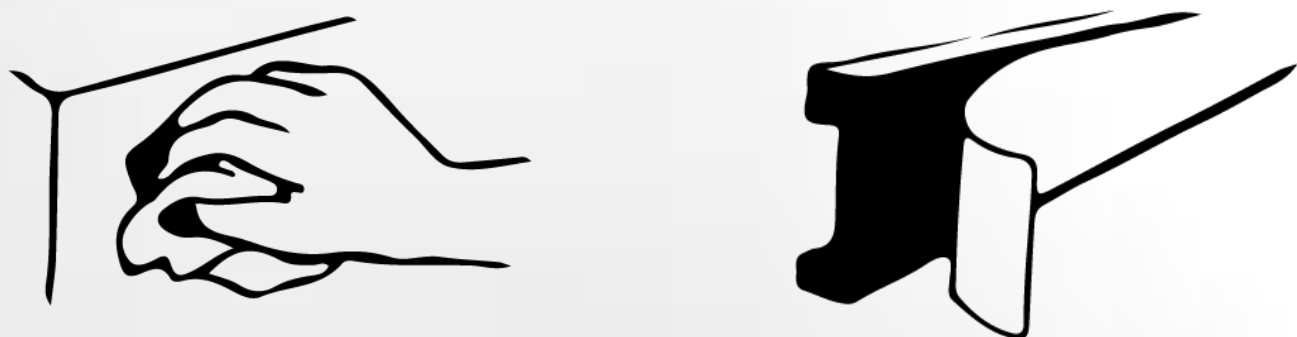

Unroll curtain & lay flat for 30 mins to allow to straighten. Sort the C-sections & make sure they fit the cabinets. The surface must be clean & dry. Please use a suitable cleaning fluid, wipe in one direction & allow five mins to evaporate. **DO NOT POLISH!**

Ensure you have marked on the fridge/freezer where they are to be fitted. Then, take a C-section & peel off about 2" (5cms) of the release strip from each end of the self-adhesive tape.


STEP TWO

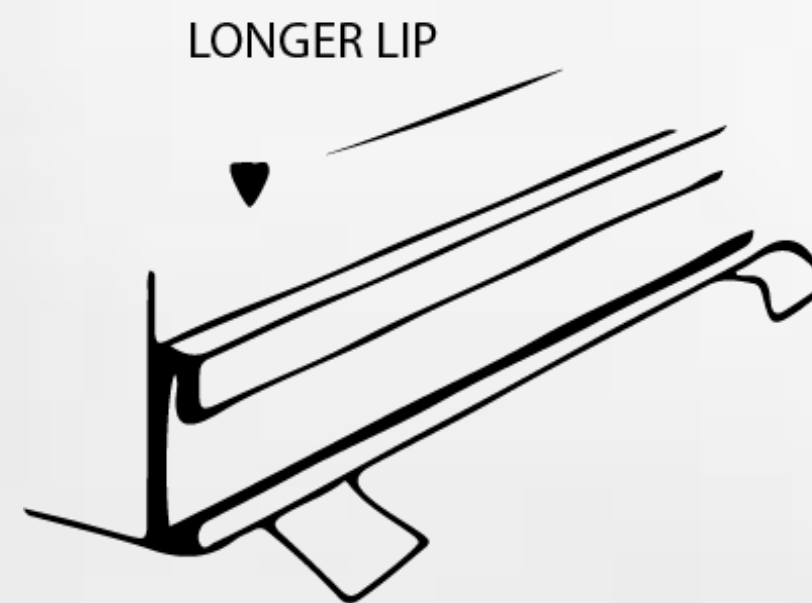

Make sure the longer lip of the C-section is uppermost & line up its lower edge with the bottom of the fascia, ensuring it is horizontal so that the curtain hangs smoothly. Press each end lightly so you can make any adjustments.

When you are satisfied with its position, pull the release strip away completely & press the C-section firmly into place. Leave for 10 minutes before moving on to step 3.

STEP THREE

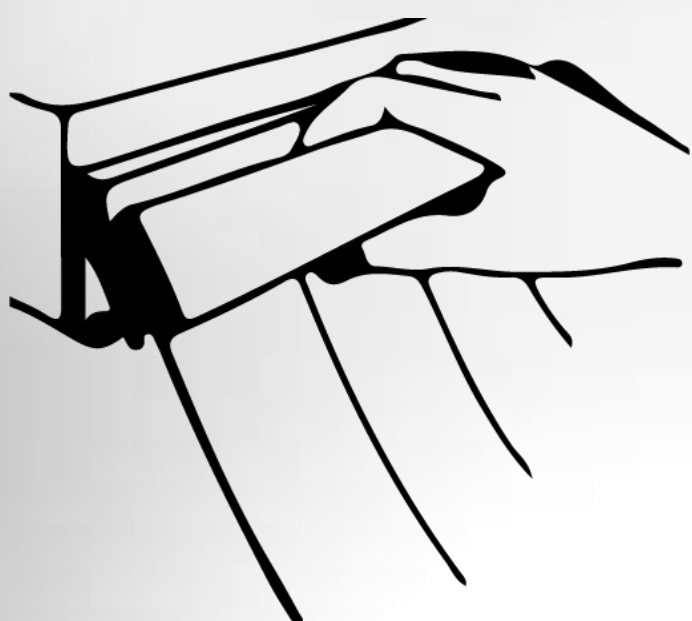


Slot the curtain into the C-section & let it hang down over the sill.

STEP FOUR



Mark on the cabinet, with a pencil, the position of the lower edge of the bottom rail.

STEP FIVE

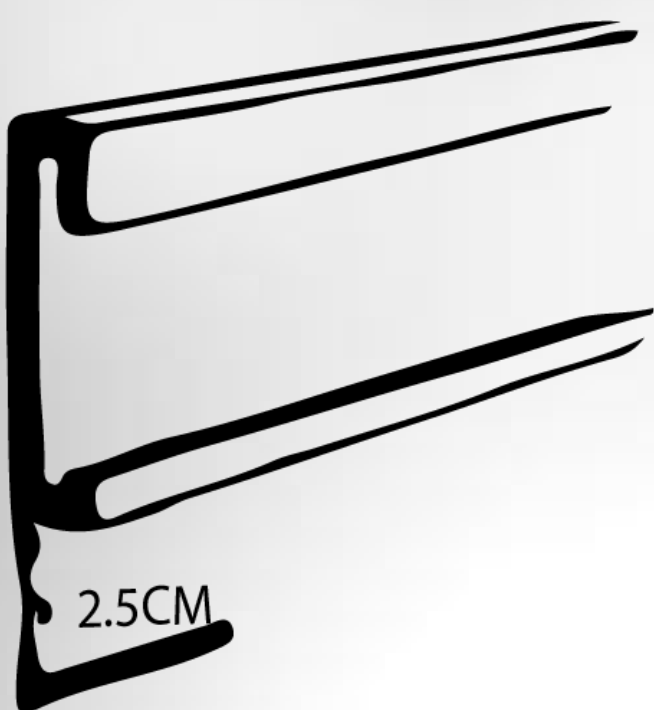

Take a matching C-section, again with its longer lip uppermost, & fix it 1" (2.5cms) above the mark.

STEP SIX



Slot the bottom rail into the C-section & add the side strips if applicable.

**IF YOU HAVE ANY TROUBLE WITH ANY OF THE POINTS ABOVE,
PLEASE DON'T HESITATE TO CONTACT OUR SALES TEAM ON
01925 638753 OR EMAIL SALES@RAYFLEXGROUP.CO.UK**